

Audi V27.82 Diagnostics List (Note: For reference only)

Year	System Type	Protocol Type	Systems	Functions
			01 Engine electronics	
			11 Engine electronics 2	
			21 Engine electronics 3	
			02 Transmission Electronics	
			03 Brake Electronics	
			08 AC/Heating electronics	
			25 Immobilizer	
			47 Soundsystem	
			12 Clutch electronics	
			34 Self leveling suspension	
			15 Airbags	
			16 Steering Wheel Electronics	
			44 Steering assistance	
			35 Central Locking	
			14 Wheel damping electronics	
			17 Instrument Cluster	
			18 Aux heating	
			13 Distance control	
			19 Gateway data bus	
			26 Electric roof control	
			29 Left light control	
			39 Right light control	
			37 Navigation	
			45 Interior Monitoring	
			46 Central Control Module	
			49 Auto. Lighting switch	
			51 Electric drive	
			61 Battery control	
			75 Emergency call module	
			76 Parking aid	
			09 Electronic Ctrl Electronics	
			22 4WD Electronics	
			24 Drive slip control	
			36 Driver`s side seat adj.	
			41 Diesel pump electronics	
			55 Headlight range control	
			56 Radio	
			65 Tyre pressure monitoring	B01: Control Unit Info
			66 Seat-/mirror adjust.	B02: Read Fault Codes
			71 Battery charger	B03: Clear Fault Codes
			42 DRIVER-DOOR ELECT.	B04: Measuring Blocks (Live Data)
			52 PASSE.-DOOR ELECT.	B05: Read FreFrame
			62 LR-DOOR ELECTRONI.	B06: Readiness
			72 RR-DOOR ELECTRONI.	B07: identification services

Audi V27.82 Diagnostics List (Note:For reference only)

Year	System Type	Protocol Type	Systems	Functions
		BOSCH	23 BRAKER BOOSTER	B07: Identification services
			43 BRAKER BOOST.ASSI.	B08: Single Reading
			63 DRVS BOARDING ASS1	S01: Output Tests
			73 DRVS BOARDING ASS2	S02: Basic Settings
			54 Rear spoiler	S03: Adaptation
			05 ACCESS & PERMISSI.	S04: Login
			06 PASSENE. SEAT ADJ.	S05: Access permission
			07 DISPLAY-/CNTL UNIT	S06: Coding II
			27 DIS./CTL UNIT REAR	S07: Code Module
			57 TV-TUNER	S08: Long Code
			67 VOICE CONTROL	S09: Chassis Number adjustment
			77 TELEPHONE	
			38 ROOF ELECTRONICS	
			48 DRVS SEAT ADJ.REAR	
			68 WIPER ELECTRONICS	
			78 SLIDING DOOR	
			59 TOWING PROTECTION	
			69 TRAILER FUNCTION	
			28 Climate Control Unit Rear	
			31 Engine Electronics Conjunct.	
			32 Locking Electronisc	
			53 Parking Brake	
			58 Auxiliary Fuel Tank	
			64 Stabilizers	
			1C Vehicle Position Detection	
			2D Voice Amplification	
			3D Special Function	
			6E Roof Display/Control Head	
			7E Ind.Unit in Inst.Panel Ins.	
			0D Sliding Door Left	
			7D Auxiliary Heater	
			0F Radio Tuner-Digital	
			1F Radio Satellite	
			2F TV Tuner-Digital	
			04 Steering Position	
			74 Vehicle Control System	
			3C Lane Departure Assistance System	
			4C Tyre Pressure Monitor II	
			5C Lane Keeping Assistance System	
			6C Rear Camera	
		5D Opertion		
		6D Electronic Equipment of Trunk Lid		
		0B Auxiliary Air Heater		
		5F Information Electronic Equipment 1		

Audi V27.82 Diagnostics List (Note: For reference only)

Year	System Type	Protocol Type	Systems	Functions		
before 2007	Without CAN BUS		6F Confort Central Control Unit II			
			1B Power-Assisted Steering			
			10 Parking Assist System 2			
			BF Sliding Door Right			
					01 Engine electronics	
					11 Engine electronics 2	
					21 Engine electronics 3	
					02 Transmission Electronics	
					03 Brake Electronics	
					08 AC/Heating electronics	
					25 Immobilizer	
					47 Soundsystem	
					12 Clutch electronics	
					34 Self leveling suspension	
					15 Airbags	
					16 Steering Wheel Electronics	
					44 Steering assistance	
					35 Central Locking	
					14 Wheel damping electronics	
					17 Instrument Cluster	
					18 Aux heating	
					13 Distance control	
					19 Gateway data bus	
					26 Electric roof control	
					29 Left light control	
					39 Right light control	
					37 Navigation	
					45 Interior Monitoring	
					46 Central Control Module	
					49 Auto. Lighting switch	
					51 Electric drive	
		61 Battery control				
		75 Emergency call module				
		76 Parking aid				
09 Electronic Ctrl Electronics						
22 4WD Electronics						
24 Drive slip control						
36 Driver`s side seat adj.						
41 Diesel pump electronics						
55 Headlight range control						
56 Radio						
65 Tyre pressure monitoring						
66 Seat-/mirror adjust.						
71 Battery charger						

Audi V27.82 Diagnostics List (Note:For reference only)

Year	System Type	Protocol Type	Systems	Functions
		KWP 2000	42 DRIVER-DOOR ELECT.	01 Control Unit Info 02 Read Fault Codes 08 Measuring Blocks (Live Data) 05 Clear Fault Codes 04 Basic Settings 03 output tests 10 adaptation 11 code module 16 Access permission
			52 PASSE.-DOOR ELECT.	
			62 LR-DOOR ELECTRONI.	
			72 RR-DOOR ELECTRONI.	
			23 BRAKER BOOSTER	
			43 BRAKER BOOST.ASSI.	
			63 DRVS BOARDING ASS1	
			73 DRVS BOARDING ASS2	
			54 Rear spoiler	
			05 ACCESS & PERMISSI.	
			06 PASSENE. SEAT ADJ.	
			07 DISPLAY-/CNTL UNIT	
			27 DIS./CTL UNIT REAR	
			57 TV-TUNER	
			67 VOICE CONTROL	
			77 TELEPHONE	
			38 ROOF ELECTRONICS	
			48 DRVS SEAT ADJ.REAR	
			68 WIPER ELECTRONICS	
			78 SLIDING DOOR	
			59 TOWING PROTECTION	
			69 TRAILER FUNCTION	
			28 Climate Control Unit Rear	
			31 Engine Electronics Conjunct.	
			32 Locking Electronisc	
			53 Parking Brake	
			58 Auxiliary Fuel Tank	
			64 Stabilizers	
			1C Vehicle Position Detection	
			2D Voice Amplification	
			3D Special Function	
			6E Roof Display/Control Head	
			7E Ind.Unit in Inst.Panel Ins.	
			0D Sliding Door Left	
			7D Auxiliary Heater	
			0F Radio Tuner-Digital	
			1F Radio Satellite	
			2F TV Tuner-Digital	
			04 Steering Position	
			74 Vehicle Control System	
			3C Lane Departure Assistance System	
			4C Tyre Pressure Monitor II	
		5C Lane Keeping Assistance System		
		6C Rear Camera		

Audi V27.82 Diagnostics List (Note: For reference only)

Year	System Type	Protocol Type	Systems	Functions
			5D Opertion	
			6D Electronic Equipment of Trunk Lid	
			0B Auxiliary Air Heater	
			5F Information Electronic Equipment 1	
			6F Confort Central Control Unit II	
			1B Power-Assisted Steering	
			10 Parking Assist System 2	
			BF Sliding Door Right	
			01 Engine electronics	
			11 Engine electronics 2	
			44 Steering assistance	
			05 ACCESS & PERMISSI.	
			21 Engine electronics 3	
			31 Engine Electronics Conjunct.	
			61 Battery control	
			02 Transmission Electronics	
			22 4WD Electronics	
			42 DRIVER-DOOR ELECT.	
			52 PASSE.-DOOR ELECT.	
			62 LR-DOOR ELECTRONI.	
			72 RR-DOOR ELECTRONI.	
			03 Brake Electronics	
			13 Distance control	
			53 Parking Brake	
			34 Self leveling suspension	
			15 Airbags	
			25 Immobilizer	
			55 Headlight range control	
			65 Tyre pressure monitoring	
			75 Emergency call module	
			06 PASSENE. SEAT ADJ.	
			16 Steering Wheel Electronics	
			26 Electric roof control	
			36 Driver`s side seat adj.	
			46 Central Control Module	
			56 Radio	
			66 Seat-/mirror adjust.	B01: Control Unit Info
			76 Parking aid	B02: Read Fault Codes
			1D Driver identification	B03: Clear Fault Codes
			3D Special Function	B04: Measuring Blocks (Live
			07 DISPLAY-/CNTL UNIT	Data)
			17 Instrument Cluster	B05: Read FreFrame
			37 Navigation	B06: Readiness
			47 Soundsystem	B07: identification services

Audi V27.82 Diagnostics List (Note:For reference only)

Year	System Type	Protocol Type	Systems	Functions
	CAN BUS	CAN BUS	57 TV-TUNER	B08: Single Reading
			67 VOICE CONTROL	S01: Output Tests
			77 TELEPHONE	S02: Basic Settings
			0E Media player position 1	S03: Adaptation
			1E Media player position 2	S04: Login
			2E Media player position 3	S05: Access permission
			3E Media player position 4	S06: Coding II
			4E Control head RR	S07: Code Module
			5E Control head LR	S08: Long Code
			7E Ind.Unit in Inst.Panel Ins.	S09: Chassis Number
			08 AC/Heating electronics	adjustment
			18 Aux heating	
			28 Climate Control Unit Rear	
			38 ROOF ELECTRONICS	
			7D Auxiliary Heater	
			09 Electronic Ctrl Electronics	
			19 Gateway data bus	
			69 TRAILER FUNCTION	
			0F Radio Tuner-Digital	
			1F Radio Satellite	
			2F TV Tuner-Digital	
			4F Electronic central electric II	
			04 Steering Position	
			74 Vehicle Control System	
			3C Lane Departure Assistance System	
			4C Tyre Pressure Monitor II	
			5C Lane Keeping Assistance System	
			6C Rear Camera	
			5D Opertion	
			6D Electronic Equipment of Trunk Lid	
			0B Auxiliary Air Heater	
			5F Information Electronic Equipment 1	
			6F Confort Central Control Unit II	
	1B Power-Assisted Steering			
	10 Parking Assist System 2			
	20 High Beam Assistance Device			
	30 Special Function 2			
	BF Sliding Door Right			
	CAN BUS		Collection services	

NOTE:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD

Audi **V27. 82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A2	2000>2005	8Z	01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			18 Aux heating	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			45 Interior Monitoring	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			46 Central Control Module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			57 TV-TUNER	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			75 Emergency call module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			76 Parking aid	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
77 TELEPHONE	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A1	2011>	8X	17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
Audi A3/S3	1997>2003	8L	01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			22 4WD Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			35 Central Locking	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			45 Interior Monitoring	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			55 Headlight range control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			57 TV-TUNER	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			75 Emergency call module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
76 Parking aid	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
			01 Engine electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			02 Transmission Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			03 Brake Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			08 AC/Heating electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S08
			0F Radio Tuner-Digital	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06

Audi **V27. 82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A3/S3/Cabrio	2004>2013	8P	17 Instrument Cluster	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			18 Aux heating	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			19 Gateway data bus	B01,B02,B03,B04,B07,S01,S02,S03,S05,S08
			22 4WD Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			25 Immobilizer	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			26 Electric roof control	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			36 Driver`s side seat adj.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			37 Navigation	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			44 Steering assistance	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			46 Central Control Module	B01,B02,B03,B04,B07,S01,S02,S03,S05,S08
			47 Soundsystem	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			55 Headlight range control	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			56 Radio	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			57 TV-TUNER	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			69 TRAILER FUNCTION	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			76 Parking aid	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
77 TELEPHONE	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06			
7D Auxiliary Heater	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06			
			01 Engine electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi V27.82 Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A3/S3/Cabrio NA	2010>2013	FM	08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
Audi A3/S3/Cabrio	2013>	8V	01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi **V27. 82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
Audi 80/S2 B4	1992>1996	8C	01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A4 B5	1995>2001	8D	03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			35 Central Locking	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			45 Interior Monitoring	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			55 Headlight range control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			57 TV-TUNER	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			67 VOICE CONTROL	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			75 Emergency call module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			76 Parking aid	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
77 TELEPHONE	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
			01 Engine electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			02 Transmission Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			03 Brake Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,S01,S02,S03
			0F Radio Tuner-Digital	B01,B02,B03,B04,S01,S02,S03
			11 Engine electronics 2	B01,B02,B03,B04,S01,S02,S03
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,S01,S02,S03

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A4 B6/B7	2001>2008	8E	17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03
			18 Aux heating	B01,B02,B03,B04,S01,S02,S03
			36 Driver`s side seat adj.	B01,B02,B03,B04,S01,S02,S03
			37 Navigation	B01,B02,B03,B04,S01,S02,S03
			45 Interior Monitoring	B01,B02,B03,B04,S01,S02,S03
			46 Central Control Module	B01,B02,B03,B04,S01,S02,S03
			55 Headlight range control	B01,B02,B03,B04,S01,S02,S03
			56 Radio	B01,B02,B03,B04,S01,S02,S03
			57 TV-TUNER	B01,B02,B03,B04,S01,S02,S03
			65 Tyre pressure monitoring	B01,B02,B03,B04,S01,S02,S03
			67 VOICE CONTROL	B01,B02,B03,B04,S01,S02,S03
			69 TRAILER FUNCTION	B01,B02,B03,B04,S01,S02,S03
			75 Emergency call module	B01,B02,B03,B04,S01,S02,S03
			76 Parking aid	B01,B02,B03,B04,S01,S02,S03
77 TELEPHONE	B01,B02,B03,B04,S01,S02,S03			
			01 Engine electronics	B01,B02,B03,B04,S01,S03
			02 Transmission Electronics	B01,B02,B03,B04
			03 Brake Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			06 PASSENE. SEAT ADJ.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			08 AC/Heating electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S08
			0E Media player position 1	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			0F Radio Tuner-Digital	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06

Audi **V27. 82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A4 B8	2008>	8K	10 Parking Assist System 2	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			13 Distance control	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			14 Wheel damping electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			17 Instrument Cluster	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			18 Aux heating	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			19 Gateway data bus	B01,B02,B03,B04,B07,S01,S02,S03,S05,S08
			1B Power-Assisted Steering	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			1E Media player position 2	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			36 Driver`s side seat adj.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			37 Navigation	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			3C Lane Departure Assistance System	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			3D Special Function	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			46 Central Control Module	B01,B02,B03,B04,B07,S01,S02,S03,S05,S08
			47 Soundsystem	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			53 Parking Brake	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			55 Headlight range control	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			56 Radio	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			57 TV-TUNER	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
5C Lane Keeping Assistance System	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06			
62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06			
65 Tyre pressure monitoring	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			67 VOICE CONTROL	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			69 TRAILER FUNCTION	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			6C Rear Camera	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			6D Electronic Equipment of Trunk Lid	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			77 TELEPHONE	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
Audi A4 B8 NAR	2010>	FL	01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
Audi Cabrio B4	1992>2000	8G	01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			26 Electric roof control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			35 Central Locking	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			01 Engine electronics	B01,B02,B03,B04,S01,S02,S03

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi Cabrio B6/B7	2003>2009	8H	02 Transmission Electronics	B01,B02,B03,B04,S01,S02,S03
			03 Brake Electronics	B01,B02,B03,B04,S01,S02,S03
			08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,S01,S02,S03
			0F Radio Tuner-Digital	B01,B02,B03,B04,S01,S02,S03
			11 Engine electronics 2	B01,B02,B03,B04,S01,S02,S03
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,S01,S02,S03
			17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03
			18 Aux heating	B01,B02,B03,B04,S01,S02,S03
			26 Electric roof control	B01,B02,B03,B04,S01,S02,S03
			36 Driver`s side seat adj.	B01,B02,B03,B04,S01,S02,S03
			37 Navigation	B01,B02,B03,B04,S01,S02,S03
			45 Interior Monitoring	B01,B02,B03,B04,S01,S02,S03
			46 Central Control Module	B01,B02,B03,B04,S01,S02,S03
			55 Headlight range control	B01,B02,B03,B04,S01,S02,S03
			56 Radio	B01,B02,B03,B04,S01,S02,S03
			57 TV-TUNER	B01,B02,B03,B04,S01,S02,S03
			63 DRVS BOARDING ASS1	B01,B02,B03,B04,S01,S02,S03
			65 Tyre pressure monitoring	B01,B02,B03,B04,S01,S02,S03
67 VOICE CONTROL	B01,B02,B03,B04,S01,S02,S03			
73 DRVS BOARDING ASS2	B01,B02,B03,B04,S01,S02,S03			
75 Emergency call module	B01,B02,B03,B04,S01,S02,S03			
76 Parking aid	B01,B02,B03,B04,S01,S02,S03			
77 TELEPHONE	B01,B02,B03,B04,S01,S02,S03			

Audi **V27. 82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi TT	1997>2007	8N	01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			22 4WD Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			35 Central Locking	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			45 Interior Monitoring	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			55 Headlight range control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			76 Parking aid	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
77 TELEPHONE	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
			01 Engine electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			02 Transmission Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			03 Brake Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			08 AC/Heating electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			0F Radio Tuner-Digital	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			14 Wheel damping electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			17 Instrument Cluster	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			18 Aux heating	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi TT	2007>	8J	19 Gateway data bus	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			22 4WD Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			25 Immobilizer	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			26 Electric roof control	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			37 Navigation	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			44 Steering assistance	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			46 Central Control Module	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			47 Soundsystem	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			4C Tyre Pressure Monitor II	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			55 Headlight range control	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			56 Radio	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			76 Parking aid	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			77 TELEPHONE	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
7D Auxiliary Heater	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06			
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi TT/TTRS NAR	2010>	FK	17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Audi **V27. 82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
Audi A5/S5	2008	8T	01 Engine electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			02 Transmission Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			03 Brake Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			06 PASSENE. SEAT ADJ.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			08 AC/Heating electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			0E Media player position 1	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			0F Radio Tuner-Digital	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			10 Parking Assist System 2	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			13 Distance control	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			14 Wheel damping electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			17 Instrument Cluster	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			18 Aux heating	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			19 Gateway data bus	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			1B Power-Assisted Steering	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			1E Media player position 2	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
36 Driver`s side seat adj.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06			
37 Navigation	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06			
3C Lane Departure Assistance System	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06			
3D Special Function	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06			

Audi **V27. 82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			46 Central Control Module	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			47 Soundsystem	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			53 Parking Brake	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			55 Headlight range control	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			56 Radio	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			57 TV-TUNER	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			5C Lane Keeping Assistance System	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			65 Tyre pressure monitoring	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			67 VOICE CONTROL	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			69 TRAILER FUNCTION	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			6C Rear Camera	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			6D Electronic Equipment of Trunk Lid	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			77 TELEPHONE	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A5/S5/RS5 NAR	2010>	FH	19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A5/S5 Cab	2009>	8F	01 Engine electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			02 Transmission Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			03 Brake Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			06 PASSENE. SEAT ADJ.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			08 AC/Heating electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			0E Media player position 1	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			0F Radio Tuner-Digital	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			10 Parking Assist System 2	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			13 Distance control	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			14 Wheel damping electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			17 Instrument Cluster	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			18 Aux heating	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			19 Gateway data bus	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			1B Power-Assisted Steering	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			1E Media player position 2	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			26 Electric roof control	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			36 Driver`s side seat adj.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			37 Navigation	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
3C Lane Departure Assistance System	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06			
3D Special Function	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06			

Audi **V27. 82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			46 Central Control Module	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			47 Soundsystem	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			53 Parking Brake	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			55 Headlight range control	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			56 Radio	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			57 TV-TUNER	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			5C Lane Keeping Assistance System	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			65 Tyre pressure monitoring	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			67 VOICE CONTROL	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			69 TRAILER FUNCTION	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			6C Rear Camera	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			6D Electronic Equipment of Trunk Lid	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			77 TELEPHONE	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A5/S5 Cab NAR	2010>	FR	19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi 100/200 C3	>1991	44	01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
Audi 100/A6 C4	1992>1997	4A	01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			35 Central Locking	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
Audi A6 C5	1998>2006	4B	01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			06 PASSENE. SEAT ADJ.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			18 Aux heating	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			34 Self leveling suspension	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			35 Central Locking	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09

Audi V27.82 Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A8 CS	1998-2000	4B	36 Driver`s side seat adj.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			45 Interior Monitoring	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			55 Headlight range control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			57 TV-TUNER	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			65 Tyre pressure monitoring	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			67 VOICE CONTROL	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			75 Emergency call module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			76 Parking aid	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			77 TELEPHONE	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			06 PASSENE. SEAT ADJ.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			0E Media player position 1	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			0F Radio Tuner-Digital	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			11 Engine electronics 2	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			13 Distance control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A6 C6	2005>2011	4F	17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			18 Aux heating	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			19 Gateway data bus	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			1E Media player position 2	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			20 High Beam Assistance Device	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			28 Climate Control Unit Rear	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			34 Self leveling suspension	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			36 Driver`s side seat adj.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			3D Special Function	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			46 Central Control Module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			47 Soundsystem	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			4C Tyre Pressure Monitor II	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			4F Electronic central electric II	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			53 Parking Brake	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			55 Headlight range control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			57 TV-TUNER	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
5F Information Electronic Equipment 1	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
61 Battery control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
65 Tyre pressure monitoring	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
67 VOICE CONTROL	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			69 TRAILER FUNCTION	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			6D Electronic Equipment of Trunk Lid	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			76 Parking aid	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			77 TELEPHONE	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
Audi A6 C6 NAR	2010>2011	FB	65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi **V27. 82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A6	2011>	4G	19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A6 C7 NAR	2011>	FC	01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi **V27. 82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A7	2011>	4G	55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A7 NAR	2011>	FC	34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
Audi A8 D2	1994>2003	4D	01 Engine electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			03 Brake Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			11 Engine electronics 2	B01,B02,B03,B04,S01,S02,S03,S05,S06
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03,S05,S06
			18 Aux heating	B01,B02,B03,B04,S01,S02,S03,S05,S06
			25 Immobilizer	B01,B02,B03,B04,S01,S02,S03,S05,S06
			35 Central Locking	B01,B02,B03,B04,S01,S02,S03,S05,S06
			37 Navigation	B01,B02,B03,B04,S01,S02,S03,S05,S06
			45 Interior Monitoring	B01,B02,B03,B04,S01,S02,S03,S05,S06
			55 Headlight range control	B01,B02,B03,B04,S01,S02,S03,S05,S06
			56 Radio	B01,B02,B03,B04,S01,S02,S03,S05,S06
			57 TV-TUNER	B01,B02,B03,B04,S01,S02,S03,S05,S06
			65 Tyre pressure monitoring	B01,B02,B03,B04,S01,S02,S03,S05,S06
			67 VOICE CONTROL	B01,B02,B03,B04,S01,S02,S03,S05,S06
75 Emergency call module	B01,B02,B03,B04,S01,S02,S03,S05,S06			
76 Parking aid	B01,B02,B03,B04,S01,S02,S03,S05,S06			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			77 TELEPHONE	B01,B02,B03,B04,S01,S02,S03,S05,S06
			02 Transmission Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			01 Engine electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			02 Transmission Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			03 Brake Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			06 PASSENE. SEAT ADJ.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,S01,S02,S03,S05,S06
			08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S07
			0E Media player position 1	B01,B02,B03,B04,S01,S02,S03,S05,S06
			0F Radio Tuner-Digital	B01,B02,B03,B04,S01,S02,S03,S05,S06
			11 Engine electronics 2	B01,B02,B03,B04,S01,S02,S03,S05,S06
			13 Distance control	B01,B02,B03,B04,S01,S02,S03,S05,S06
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03,S05,S06
			18 Aux heating	B01,B02,B03,B04,S01,S02,S03,S05,S06
			19 Gateway data bus	B01,B02,B03,B04,S01,S02,S03,S05,S07
			1D Driver identification	B01,B02,B03,B04,S01,S02,S03,S05,S06
			1E Media player position 2	B01,B02,B03,B04,S01,S02,S03,S05,S06
			28 Climate Control Unit Rear	B01,B02,B03,B04,S01,S02,S03,S05,S06
			34 Self leveling suspension	B01,B02,B03,B04,S01,S02,S03,S05,S06

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A8 D3	2003>2010	4E	36 Driver`s side seat adj.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			37 Navigation	B01,B02,B03,B04,S01,S02,S03,S05,S06
			38 ROOF ELECTRONICS	B01,B02,B03,B04,S01,S02,S03,S05,S06
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			46 Central Control Module	B01,B02,B03,B04,S01,S02,S03,S05,S07
			47 Soundsystem	B01,B02,B03,B04,S01,S02,S03,S05,S06
			4E Control head RR	B01,B02,B03,B04,S01,S02,S03,S05,S06
			4F Electronic central electric II	B01,B02,B03,B04,S01,S02,S03,S05,S06
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			53 Parking Brake	B01,B02,B03,B04,S01,S02,S03,S05,S06
			55 Headlight range control	B01,B02,B03,B04,S01,S02,S03,S05,S06
			56 Radio	B01,B02,B03,B04,S01,S02,S03,S05,S06
			57 TV-TUNER	B01,B02,B03,B04,S01,S02,S03,S05,S06
			5E Control head LR	B01,B02,B03,B04,S01,S02,S03,S05,S06
			5F Information Electronic Equipment 1	B01,B02,B03,B04,S01,S02,S03,S05,S06
			61 Battery control	B01,B02,B03,B04,S01,S02,S03,S05,S06
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			65 Tyre pressure monitoring	B01,B02,B03,B04,S01,S02,S03,S05,S06
			66 Seat-/mirror adjust.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			67 VOICE CONTROL	B01,B02,B03,B04,S01,S02,S03,S05,S06
69 TRAILER FUNCTION	B01,B02,B03,B04,S01,S02,S03,S05,S06			
6C Rear Camera	B01,B02,B03,B04,S01,S02,S03,S05,S06			
72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03,S05,S06			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			75 Emergency call module	B01,B02,B03,B04,S01,S02,S03,S05,S06
			76 Parking aid	B01,B02,B03,B04,S01,S02,S03,S05,S06
			77 TELEPHONE	B01,B02,B03,B04,S01,S02,S03,S05,S06
Audi A8 D3 NAR	2010	FA	01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A8 D4	2010>	4H	37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi A8 D4 NAR	2010>	FD	02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi Q3	2012>	8U	56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			03 Brake Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			06 PASSENE. SEAT ADJ.	B01,B02,B03,B04,S01,S02,S03,S05,S06

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi Q5	2009>	8R	08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			0E Media player position 1	B01,B02,B03,B04,S01,S02,S03,S05,S06
			10 Parking Assist System 2	B01,B02,B03,B04,S01,S02,S03,S05,S06
			13 Distance control	B01,B02,B03,B04,S01,S02,S03,S05,S06
			14 Wheel damping electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03,S05,S06
			18 Aux heating	B01,B02,B03,B04,S01,S02,S03,S05,S06
			19 Gateway data bus	B01,B02,B03,B04,S01,S02,S03,S05,S06
			1B Power-Assisted Steering	B01,B02,B03,B04,S01,S02,S03,S05,S06
			20 High Beam Assistance Device	B01,B02,B03,B04,S01,S02,S03,S05,S06
			22 4WD Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			2E Media player position 3	B01,B02,B03,B04,S01,S02,S03,S05,S06
			30 Special Function 2	B01,B02,B03,B04,S01,S02,S03,S05,S06
			36 Driver`s side seat adj.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			3C Lane Departure Assistance System	B01,B02,B03,B04,S01,S02,S03,S05,S06
			3D Special Function	B01,B02,B03,B04,S01,S02,S03,S05,S06
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,S05,S06
46 Central Control Module	B01,B02,B03,B04,S01,S02,S03,S05,S06			
47 Soundsystem	B01,B02,B03,B04,S01,S02,S03,S05,S06			
52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,S05,S06			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			53 Parking Brake	B01,B02,B03,B04,S01,S02,S03,S05,S06
			55 Headlight range control	B01,B02,B03,B04,S01,S02,S03,S05,S06
			56 Radio	B01,B02,B03,B04,S01,S02,S03,S05,S06
			57 TV-TUNER	B01,B02,B03,B04,S01,S02,S03,S05,S06
			5C Lane Keeping Assistance System	B01,B02,B03,B04,S01,S02,S03,S05,S06
			5F Information Electronic Equipment 1	B01,B02,B03,B04,S01,S02,S03,S05,S06
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			65 Tyre pressure monitoring	B01,B02,B03,B04,S01,S02,S03,S05,S06
			69 TRAILER FUNCTION	B01,B02,B03,B04,S01,S02,S03,S05,S06
			6C Rear Camera	B01,B02,B03,B04,S01,S02,S03,S05,S06
			6D Electronic Equipment of Trunk Lid	B01,B02,B03,B04,S01,S02,S03,S05,S06
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			77 TELEPHONE	B01,B02,B03,B04,S01,S02,S03,S05,S06
			01 Engine electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			02 Transmission Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			03 Brake Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			06 PASSENE. SEAT ADJ.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,S01,S02,S03,S05,S06
			08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			0E Media player position 1	B01,B02,B03,B04,S01,S02,S03,S05,S06
			0F Radio Tuner-Digital	B01,B02,B03,B04,S01,S02,S03,S05,S06

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi Q7	2007>	4L	11 Engine electronics 2	B01,B02,B03,B04,S01,S02,S03,S05,S06
			13 Distance control	B01,B02,B03,B04,S01,S02,S03,S05,S06
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03,S05,S06
			18 Aux heating	B01,B02,B03,B04,S01,S02,S03,S05,S06
			19 Gateway data bus	B01,B02,B03,B04,S01,S02,S03,S05,S06
			1E Media player position 2	B01,B02,B03,B04,S01,S02,S03,S05,S06
			28 Climate Control Unit Rear	B01,B02,B03,B04,S01,S02,S03,S05,S06
			34 Self leveling suspension	B01,B02,B03,B04,S01,S02,S03,S05,S06
			36 Driver`s side seat adj.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			37 Navigation	B01,B02,B03,B04,S01,S02,S03,S05,S06
			3C Lane Departure Assistance System	B01,B02,B03,B04,S01,S02,S03,S05,S06
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			46 Central Control Module	B01,B02,B03,B04,S01,S02,S03,S05,S06
			47 Soundsystem	B01,B02,B03,B04,S01,S02,S03,S05,S06
			4F Electronic central electric II	B01,B02,B03,B04,S01,S02,S03,S05,S06
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			55 Headlight range control	B01,B02,B03,B04,S01,S02,S03,S05,S06
			56 Radio	B01,B02,B03,B04,S01,S02,S03,S05,S06
57 TV-TUNER	B01,B02,B03,B04,S01,S02,S03,S05,S06			
5C Lane Keeping Assistance System	B01,B02,B03,B04,S01,S02,S03,S05,S06			
61 Battery control	B01,B02,B03,B04,S01,S02,S03,S05,S06			

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			65 Tyre pressure monitoring	B01,B02,B03,B04,S01,S02,S03,S05,S06
			67 VOICE CONTROL	B01,B02,B03,B04,S01,S02,S03,S05,S06
			69 TRAILER FUNCTION	B01,B02,B03,B04,S01,S02,S03,S05,S06
			6C Rear Camera	B01,B02,B03,B04,S01,S02,S03,S05,S06
			6D Electronic Equipment of Trunk Lid	B01,B02,B03,B04,S01,S02,S03,S05,S06
			6F Confort Central Control Unit II	B01,B02,B03,B04,S01,S02,S03,S05,S06
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			76 Parking aid	B01,B02,B03,B04,S01,S02,S03,S05,S06
			77 TELEPHONE	B01,B02,B03,B04,S01,S02,S03,S05,S06
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi Q7 NAR	2010>	FE	09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance System	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipment 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			01 Engine electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			02 Transmission Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			03 Brake Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi R8	2007>	42	08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			11 Engine electronics 2	B01,B02,B03,B04,S01,S02,S03,S05,S06
			14 Wheel damping electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03,S05,S06
			19 Gateway data bus	B01,B02,B03,B04,S01,S02,S03,S05,S06
			25 Immobilizer	B01,B02,B03,B04,S01,S02,S03,S05,S06
			37 Navigation	B01,B02,B03,B04,S01,S02,S03,S05,S06
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			46 Central Control Module	B01,B02,B03,B04,S01,S02,S03,S05,S06
			47 Soundsystem	B01,B02,B03,B04,S01,S02,S03,S05,S06
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			56 Radio	B01,B02,B03,B04,S01,S02,S03,S05,S06
			65 Tyre pressure monitoring	B01,B02,B03,B04,S01,S02,S03,S05,S06
			6C Rear Camera	B01,B02,B03,B04,S01,S02,S03,S05,S06
			76 Parking aid	B01,B02,B03,B04,S01,S02,S03,S05,S06
			77 TELEPHONE	B01,B02,B03,B04,S01,S02,S03,S05,S06
			02 Transmission Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			03 Brake Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Audi R8 NAR	2010>	FG	09 Electronic Ctrl Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			11 Engine electronics 2	B01,B02,B03,B04,S01,S02,S03,S05,S06
			14 Wheel damping electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,S01,S02,S03,S05,S06
			17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03,S05,S06
			19 Gateway data bus	B01,B02,B03,B04,S01,S02,S03,S05,S06
			25 Immobilizer	B01,B02,B03,B04,S01,S02,S03,S05,S06
			37 Navigation	B01,B02,B03,B04,S01,S02,S03,S05,S06
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			46 Central Control Module	B01,B02,B03,B04,S01,S02,S03,S05,S06
			47 Soundsystem	B01,B02,B03,B04,S01,S02,S03,S05,S06
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,S05,S06
			56 Radio	B01,B02,B03,B04,S01,S02,S03,S05,S06
			65 Tyre pressure monitoring	B01,B02,B03,B04,S01,S02,S03,S05,S06
6C Rear Camera	B01,B02,B03,B04,S01,S02,S03,S05,S06			
76 Parking aid	B01,B02,B03,B04,S01,S02,S03,S05,S06			
77 TELEPHONE	B01,B02,B03,B04,S01,S02,S03,S05,S06			

NOTE:

Basic Functions	Special Functions
B01: Control Unit Info	S01: Output Tests
B02: Read Fault Codes	S02: Basic Settings
B03: Clear Fault Codes	S03: Adaptation
B04: Measuring Blocks (Live Data)	S04: Login

Audi **V27.82** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
B05: Read FreFrame			S05: Access permission	
B06: Readiness			S06: Coding II	
B07: identification services			S07: Code Module	
B08: Single Reading			S08: Long Code	
			S09: Chassis Number adjustment	

NOTE:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD

CONNECTOR	X431/TOOL	DIAGUN
AUDI-4	Old Audi Model with 4PIN DLC before 1999	N/A
OBD 16C	Audi Model of non-CAN BUS protocol 1999-2005	N/A
CANBUS II	All Audi Models with 16PIN DLC	N/A
SUPER 16	All Audi Models with 16PIN DLC	N/A
diagun connector	N/A	All Audi Models with 16PIN DLC