

Rolls-Royce **V10.01** Diagnostics List (Note: For reference only)

Series	Year	Chassis		SyStem	Function
	2002-2014	RR1	Drive	CAS / FEM	VCDTF
				DME / DDE	VCDTF
				DME2	VCDT
				EGS / SMG	VCDTF
				EKPS	VCDTF
				VTC	VCDT
				VTC2	VCDT
			Chassis	ABS / ACS / DSC	VCDTF
				RDC	VCDT
				ACC / FRR / LRR	VCDT
				ARS	VCDT
				EMF	VCDT
				EHC	VCDT
				EDC / VDC	VCDT
			Body	CIM	VCDT
				SGM-ZGM / KGM / JBE / JBBF	VCDTF
				SRS / SIM / MRS / ACSM	VCDTF
				SASL	VCDT
				SASR	VCDT
				STVL / CDM	VCDT
				STVR	VCDT
				SSFA	VCDT
				SSBF	VCDT
				SBSL	VCDT
				SBSR	VCDT
				SSH / HKFM	VCDT
				SFZ	VCDT
				CEM	VCDT
				AHL	VCDT
				CA	VCDT
				DVDC / MMC	VCDT
				SG-FD-GW	VCDT
				SG-FD	VCDT
				SVS	VCDT
				TCU / ULF / Tel	VCDT
				AMP / AMPH / AMPT	VCDTF
				KHI / KHM	VCDT
				NAV	VCDT
				CDC	VCDT
				CCC-ASK	VCDT
				DWA	VCDT
				PM / MPM	VCDT
				SHD	VCDT
				RLS / RLSS	VCDT
				WIM	VCDT
				ANT	VCDT
				VM	VCDT
				SEC	VCDT
				TMFAT	VCDT
				TMBFT	VCDT
TMFAH	VCDT				
TMBFH	VCDT				
SINE	VCDT				
IBOC	VCDT				
SDARS	VCDT				
NVE / NIVI	VCDT				
DAB	VCDT				
FLA	VCDT				
INSTR	VCDTF				
PDC	VCDT				
FBI	VCDT				
CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW	VCDTF				

2006-2014

RR2

			CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO	VCDT
			SZM / BZM	VCDT
			FBZM	VCDT
			CON / ZBE	VCDT
			FCON / ZBEF	VCDT
			SMFAH	VCDT
			SMBFH	VCDT
			HKL / HKFM	VCDT
			SMFA	VCDT
			SMBF	VCDT
			LM	VCDT
			AHM	VCDT
			FD	VCDT
			IHKA / IHKR	VCDT
			FKA	VCDT
			SHZH	VCDT
			NVK	VCDT
		Coding/Program	CBS reset	S3
			CBS correct	S4
			Special Function	S5
		Drive	CAS / FEM	VCDTF
			DME / DDE	VCDTF
			DME2	VCDT
			EGS / SMG	VCDTF
			EKPS	VCDTF
			VTC	VCDT
			VTC2	VCDT
		Chassis	ABS / ACS / DSC	VCDTF
			RDC	VCDT
			ACC / FRR / LRR	VCDT
			ARS	VCDT
			EMF	VCDT
			EHC	VCDT
			EDC / VDC	VCDT
			CIM	VCDT
		Body	SGM-ZGM / KGM / JBE / JBBF	VCDTF
			SRS / SIM / MRS / ACSM	VCDTF
			SASL	VCDT
			SASR	VCDT
			STVL / CDM	VCDT
			STVR	VCDT
			SSFA	VCDT
			SSBF	VCDT
			SBSL	VCDT
			SBSR	VCDT
			SSH / HKFM	VCDT
			SFZ	VCDT
			CEM	VCDT
			AHL	VCDT
			CA	VCDT
			DVDC / MMC	VCDT
			SG-FD-GW	VCDT
			SG-FD	VCDT
			SVS	VCDT
			TCU / ULF / Tel	VCDT
			AMP / AMPH / AMPT	VCDTF
			KHI / KHM	VCDT
			NAV	VCDT
			CDC	VCDT
			CCC-ASK	VCDT
			DWA	VCDT
			PM / MPM	VCDT
			SHD	VCDT
			RLS / RLSS	VCDT
			WIM	VCDT
			ANT	VCDT
			VM	VCDT
			SEC	VCDT
		TMFAT	VCDT	
		TMBFT	VCDT	
		TMFAH	VCDT	

		TMBFH	VCDT
		SINE	VCDT
		IBOC	VCDT
		SDARS	VCDT
		NVE / NIVI	VCDT
		DAB	VCDT
		FLA	VCDT
		INSTR	VCDTF
		PDC	VCDT
		FBI	VCDT
		CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW	VCDTF
		CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO	VCDT
		SZM / BZM	VCDT
		FBZM	VCDT
		CON / ZBE	VCDT
		FCON / ZBEF	VCDT
		SMFAH	VCDT
		SMBFH	VCDT
		HKL / HKFM	VCDT
		SMFA	VCDT
		SMBF	VCDT
		LM	VCDT
		AHM	VCDT
		FD	VCDT
		IHKA / IHKR	VCDT
		FKA	VCDT
		SHZH	VCDT
		NVK	VCDT
	Coding/Program	CBS reset	S3
		CBS correct	S4
		Special Function	S5
	Drive	CAS / FEM	VCDTF
		DME / DDE	VCDTF
		DME2	VCDT
		EGS / SMG	VCDTF
		EKPS	VCDTF
		VTC	VCDT
		VTC2	VCDT
	Chassis	ABS / ACS / DSC	VCDTF
		RDC	VCDT
		ACC / FRR / LRR	VCDT
		ARS	VCDT
		EMF	VCDT
		EHC	VCDT
		EDC / VDC	VCDT
		CIM	VCDT
		SGM-ZGM / KGM / JBE / JBBF	VCDTF
		SRS / SIM / MRS / ACSM	VCDTF
		SASL	VCDT
		SASR	VCDT
		STVL / CDM	VCDT
		STVR	VCDT
		SSFA	VCDT
		SSBF	VCDT
		SBSL	VCDT
		SBSR	VCDT
		SSH / HKFM	VCDT
		SFZ	VCDT
		CEM	VCDT
		AHL	VCDT
		CA	VCDT
		DVDC / MMC	VCDT
		SG-FD-GW	VCDT
		SG-FD	VCDT
		SVS	VCDT
		TCU / ULF / Tel	VCDT
		AMP / AMPH / AMPT	VCDTF
		KHI / KHM	VCDT
		NAV	VCDT

劳斯莱斯

2007-2014

RR3

Body

CDC	VCDT
CCC-ASK	VCDT
DWA	VCDT
PM / MPM	VCDT
SHD	VCDT
RLS / RLSS	VCDT
WIM	VCDT
ANT	VCDT
VM	VCDT
SEC	VCDT
TMFAT	VCDT
TMBFT	VCDT
TMFAH	VCDT
TMBFH	VCDT
SINE	VCDT
IBOC	VCDT
SDARS	VCDT
NVE / NIVI	VCDT
DAB	VCDT
FLA	VCDT
INSTR	VCDTF
PDC	VCDT
FBI	VCDT
CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW	VCDTF
CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO	VCDT
SZM / BZM	VCDT
FBZM	VCDT
CON / ZBE	VCDT
FCON / ZBEF	VCDT
SMFAH	VCDT
SMBFH	VCDT
HKL / HKFM	VCDT
SMFA	VCDT
SMBF	VCDT
LM	VCDT
AHM	VCDT
FD	VCDT
IHKA / IHKR	VCDT
FKA	VCDT
SHZH	VCDT
NVK	VCDT
CBS reset	S3
CBS correct	S4
Special Function	S5
CAS / FEM	VCDTF
DME / DDE	VCDTF
DME2	VCDTF
EGS / SMG	VCDTF
VTG / LMV	VCDTF
EKPS	VCDTF
GWS	VCDT
EME	VCDT
SME	VCDTF
AL / AFS / ASA	VCDTF
ICM	VCDTF
ACC/FRR/LRR	VCDTF
RDC	VCDTF
ABS / ACS / DSC	VCDTF
EMF	VCDTF
HSR	VCDTF
EPS	VCDTF
EHC	VCDTF
ICMV	VCDTF
EDCSVL	VCDTF
EDCSVR	VCDTF
EDCSHL	VCDTF
EDCSHR	VCDTF
SGM-ZGM / KGM / JBE / JBBF	VCDT
SRS / SIM / MRS / ACSM	VCDTF

Coding/Program

Drive

Chassis

2008-2014

RR4

Body

SZL	VCDTF
TR SVC	VCDTF
HC / SWW	VCDTF
SCR	VCDTF
HKFM	VCDTF
SVT	VCDTF
GHAS	VCDTF
ZGW	VCDTF
CVM / CTM	VCDTF
RSE	VCDTF
PMA	VCDTF
DVDC / MMC	VCDTF
TBX	VCDTF
TCU / ULF / Tel	VCDTF
AMP / AMPH / AMPT	VCDTF
EME2	VCDTF
HUD	VCDTF
ASD	VCDTF
STML	VCDTF
STMR	VCDTF
LHML	VCDTF
LHMR	VCDTF
GZAL	VCDTF
GZAR	VCDTF
VSW	VCDTF
SECUR1	VCDTF
SECUR2	VCDTF
VM	VCDTF
EMALI	VCDTF
EMARE	VCDTF
CANSIN	VCDTF
FZD	VCDTF
NVE / NIVI	VCDTF
KAFAS	VCDTF
FLA	VCDTF
IKE / KOM / KOMBI	VCDTF
CBX-ECALL	VCDTF
CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	VCDTF
PDC	VCDTF
CON / ZBE	VCDTF
FCON / ZBEF	VCDTF
SMFAH	VCDTF
SMBFH	VCDTF
HKL / HKFM	VCDTF
SMFA	VCDTF
SMBF	VCDTF
AHM	VCDTF
FRM	VCDTF
CID	VCDTF
FD / CID	VCDTF
CIDF2	VCDTF
VDC	VCDTF
RFK	VCDTF
IHKA / IHKR	VCDTF
FKA	VCDTF
HKA	VCDTF
CBS reset	S3
CBS correct	S4
Special Function	S5
CAS / FEM	VCDTF
DME / DDE	VCDTF
DME2	VCDTF
EGS / SMG	VCDTF
VTG / LMV	VCDTF
EKPS	VCDTF
GWS	VCDT
EME	VCDT
SME	VCDTF
AL / AFS / ASA	VCDTF
ICM	VCDTF
ACC/FRR/LRR	VCDTF

Coding/Program

Drive

2012-2014

RR5

Chassis	RDC	VCDTF
	ABS / ACS / DSC	VCDTF
	EMF	VCDTF
	HSR	VCDTF
	EPS	VCDTF
	EHC	VCDTF
	ICMV	VCDTF
	EDCSVL	VCDTF
	EDCSVR	VCDTF
	EDCSHL	VCDTF
	EDCSHR	VCDTF
	SGM-ZGM / KGM / JBE / JBBF	VCDT
Body	SRS / SIM / MRS / ACSM	VCDTF
	SZL	VCDTF
	TR SVC	VCDTF
	HC / SWW	VCDTF
	SCR	VCDTF
	HKFM	VCDTF
	SVT	VCDTF
	GHAS	VCDTF
	ZGW	VCDTF
	CVM / CTM	VCDTF
	RSE	VCDTF
	PMA	VCDTF
	DVDC / MMC	VCDTF
	TBX	VCDTF
	TCU / ULF / Tel	VCDTF
	AMP / AMPH / AMPT	VCDTF
	EME2	VCDTF
	HUD	VCDTF
	ASD	VCDTF
	STML	VCDTF
	STMR	VCDTF
	LHML	VCDTF
	LHMR	VCDTF
	GZAL	VCDTF
	GZAR	VCDTF
	VSW	VCDTF
	SECUR1	VCDTF
	SECUR2	VCDTF
	VM	VCDTF
	EMALI	VCDTF
	EMARE	VCDTF
	CANSIN	VCDTF
	FZD	VCDTF
	NVE / NIVI	VCDTF
	KAFAS	VCDTF
	FLA	VCDTF
	IKE / KOM / KOMBI	VCDTF
	CBX-ECALL	VCDTF
	CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	VCDTF
	PDC	VCDTF
	CON / ZBE	VCDTF
	FCON / ZBEF	VCDTF
	SMFAH	VCDTF
	SMBFH	VCDTF
	HKL / HKFM	VCDTF
	SMFA	VCDTF
	SMBF	VCDTF
	AHM	VCDTF
	FRM	VCDTF
	CID	VCDTF
FD / CID	VCDTF	
CIDF2	VCDTF	
VDC	VCDTF	
RFK	VCDTF	
IHKA / IHKR	VCDTF	
FKA	VCDTF	
HKA	VCDTF	
Coding/Program	CBS reset	S3
	CBS correct	S4

				Special Function	S5
(*) :Tested;					
(?) :Manual on website(www.x431.com)					
Note:All description rights reserved by LAUNCH TECH.CO.,LTD					

System Notes(系统说明)	
Driver:	驱动模块:
CAS/FEM [Car Access System]	CAS/FEM [车辆进入系统]
EWS [Elec. immobilize system]	EWS [电子防盗系统]
DME/DDE [Digital motor/Diesel electronics]	DME/DDE [数字式马达电子系统/数字式柴油电子系:
DME2 [Digital Motor Electronics 2]	DME2 [发动机2]
EGS [Transmission control]	EGS [电控自动变速器]
SMG [Sequential Manual Gearbox]	SMG [序列式手动变速箱]
VTG/LMV [Gearbox control]	VTG/LMV [变速箱控制]
EKPS [Electronic Fuel pump]	EKPS [电子燃油泵]
VTC [Valvetronic]	VTC [电子控制气门]
VTC2 [Valvetronic 2]	VTC2 [电子控制气门 2]
GWS [Gear selector switch]	GWS [档位选择器开关]
QMVH [Lateral-moment distribution, rear axle]	QMVH [侧向力矩分配, 后轴]
EME [Electrical machine electronics]	EME [电气机械电子]
Chassis:	底盘模块:
ABS/ACS/DSC [Dynamic Stability Control]	ABS/ACS/DSC [动态稳定性控制]
AL/AFS/ASA [Active steering/Active Front Steering]	AL/AFS/ASA [主动转向 /主动前转向]
LDM [Longitudinal Dynamics Management]	LDM [纵向动态管理]
ICM [Integrated chassis management]	ICM [集成式底盘控制]
RDC [Tyre pressure control]	RDC [胎压控制]
ACC/FRR/LRR [Active Cruise Control]	ACC/FRR/LRR [自适应巡航控制]
ARS [Dynamic Drive]	ARS [动态驱动]
EMF [Parking brake]	EMF [停车制动器]
EPS [Electronic Power Steering]	EPS [电子动力转向]
EHPS [Electrically assisted steering]	EHPS [电动辅助转向]
EHC [Electronic Ride-Height Control]	EHC [电子高度控制]
EDC/VDC [Damper Control]	EDC/VDC [减振器控制]
ICMV [Integrated Chassis Management]	ICMV [集成式底盘控制]
VDM [Vertical Dynamics Management]	VDM [垂直动态管理]
CIM [Chassis Integration Module]	CIM [底盘综合模块]
LEW [Steering-angle sensor]	LEW [转向角传感器]
EDCSVL [Damper satellite, front left]	EDCSVL [左前减振器卫星电脑模块]
EDCSVR [Damper satellite, front right]	EDCSVR [右前减振器卫星电脑模块]
EDCSHL [Damper satellite, rear left]	EDCSHL [左后减振器卫星电脑模块]
EDCSHR [Damper satellite, rear right]	EDCSHR [右后减振器卫星电脑模块]
HSR [Rear-axle slip-angle control]	HSR [后轴打滑角度控制]
SME [Accumulator management electronics]	SME [蓄压器控制电子]
Body:	车身模块:
SGM-ZGM/KGM/JBE/JBBF [Safety and Gateway Mod	SGM-ZGM/KGM/JBE/JBBF [安全和网关模块(ZGM)]
ZKE [Central body electronic]	ZKE [中央电脑系统]

SRS/SIM/MRS/ACSM [Safety and Gateway Module (S	SRS/SGM-SIM/MRS/ACSM [安全和信息模块(SIM)]
SZL [Switch center, steering column]	SZL [转向管柱开关中心]
SASL [Satellite, A-pillar, left]	SASL [左A柱侧向加速度传感器]
SASR [Satellite, A-pillar, right]	SASR [右A柱侧向加速度传感器]
STVL/CDM [Satellite, door, front left]	STVL/CDM [左前门侧向加速度传感器]
STVR [Satellite, door, front right]	STVR [右前门侧向加速度传感器]
TR SVC [All round view camera]	TR SVC [全方位摄像头]
TMFA [Door module, driver]	TMFA [驾驶员门模块]
TMBF [Door module, front passenger]	TMBF [前乘客门模块]
SSFA [Satellite, seat, driver]	SSFA [司机座椅侧向加速度传感器]
SSBF [Satellite, seat, passenger]	SSBF [乘客座椅侧向加速度传感器]
SBSL [Satellite, B-pillar, left]	SBSL [左B柱侧向加速度传感器]
SBSR [Satellite, B-pillar, right]	SBSR [右B柱侧向加速度传感器]
HC/SWW [Lane change warning]	HC/SWW [变道警告]
SCR [Selective catalytic reduction]	SCR [可选催化减少]
SSH/HKFM [Satellite, seat, rear]	SSH/HKFM [后部座椅卫星式控制单元]
SFZ [Satellite vehicle center]	SFZ [车辆中心侧向加速度传感器]
SVT [Servotronic]	SVT [伺服助力转向系统]
CEM [Clean Energy Module]	CEM [清洁能源模块]
AHL [Adaptive directional headlights]	AHL [前照灯方向自适应]
CVM/CTM [Convertible-top module]	CVM/CTM [活动顶篷模块]
RSE [Rear Seat Entertainment]	RSE [后排座椅娱乐系统]
CA [Comfort Access]	CA [舒适进入系统]
DVDC/MMC [DVD changer]	DVDC/MMC [DVD播放机]
SG-FD-GW [Control module, rear-compartment]	SG-FD-GW [客厢后部控制模块]
SG-FD [Control module, rear-compartment]	SG-FD [客厢后部控制模块]
SVS [Language processing system]	SVS [语言处理系统]
TCU/ULF/TEL [Telematic Control unit]	TCU/ULF/TEL [信息通信控制单元]
AMP/AMPH/AMPT [Amplifier]	AMP/AMPH/AMPT [扩音器]
KHI /KHM [Headset interface]	KHI/KHM [听筒接口]
NAV [Navigation system]	NAV [导航系统]
CDC [CD Changer]	CDC [CD播放机]
HUD [Head-Up Display]	HUD [平视式显示器]
CCC-ASK [Audio system controller]	CCC-ASK [音响系统控制器]
DWA [Antitheft alarm system]	DWA [防盗警报系统]
PM/MPM [(Micro) Power module]	PM/MPM [动力模块]
SHD [Sliding/tilting sunroof]	SHD [滑动/倾斜天窗]
RLS [Rain/driving lights sensor]	RLS [雨量/阳光传感器]
WIM [Wiper module]	WIM [刮水器模块]
ANT [Aerial/antenna tuner]	ANT [天线调谐器]
VSW [Video switch]	VSW [视频开关]
JBIT [Japan Basis Interface Telephone]	JBIT [日本基本接口电话]
VM [Video Module]	VM [视频模块]

SEC [Supplementary control module]	SEC [辅助控制模块]
TMFAT [Door module, driver's door]	TMFAT [驾驶员侧车门模块]
TMBFT [Door module, passenger door]	TMBFT [乘客门模块]
TMFAH [Door module, driver's side rear]	TMFAH [驾驶员后侧车门模块]
TMBFH [Door module, passenger's side rear]	TMBFH [乘客后侧门模块]
EMALI [Left electric motor reel]	EMALI [左侧电子马达机轴]
EMARE [Right electric motor reel]	EMARE [右侧电子马达机轴]
SINE [Siren with tilt sensor]	SINE [警报器和倾斜传感器]
CANSIN [Anti_theft alarm system]	CANSIN [防盗警报系统]
MFL [Multi-function steering wheel]	MFL [多功能方向盘]
IBOC [Digital tuner US]	IBOC [美国数字调谐器]
SDARS [Satellite tuner]	SDARS [卫星调谐器]
ULF-SBX-H [Interface box High]	ULF-SBX-H [高接口箱]
FZD [Function Center, Roof]	FZD [天窗功能中心]
NVE/NIVI [Night Vision Electronics]	NVE/NIVI [夜视电子]
ALBFA [Active backrest width, driver]	ALBFA [主动式驾驶员靠背宽度]
ALBBF [Active backrest width, front passenger]	ALBBF [主动式前乘客靠背宽度]
DAB [Digital tuner]	DAB [数字调谐器]
TLC [Lane Departure Warning]	TLC [车道偏离警告]
KAFAS [Camera based driver assist systems]	KAFAS [基于摄像机原理的驾驶员辅助系统]
FLA [High Beam Assist]	FLA [远光灯协助]
INSTR [Instrument cluster]	INSTR [仪表盘]
IKE/KOM/KOMBI [Instrument cluster]	IKE/IKI/KOM/KOMBI [仪表盘]
PDC [Park Distance Control]	PDC [倒车雷达系统]
FBI [Flexible Bus Interface]	FBI [FBI]
CBX-ECALL [ComBox emergency call]	CBX-ECALL [ComBox 紧急呼叫]
CD-GW/M-ASK-GW/CCC-GW/CHAMP-GW/RAD2-GW/	CD-GW/M-ASK-GW/CCC-GW/CHAMP-GW/RAD2-GW/
CD/M-ASK-BO/RAD/CIC/RAD2-BO/CHAMP-BO/CCC-BO	CD/M-ASK-BO/RAD/CIC/RAD2-BO/CHAMP-BO/CCC-BO
SZM/BZM [Switching/Control center, center console]	SZM/BZM [中央控制台开关中心]
FBZM [Rear compartment, control center, center console]	FBZM [中央控制台后座区控制中心]
CON/ZBE [Controller]	CON/ZBE [控制器]
FCON/ZBEF [Rear Compartment controller]	FCON/ZBEF [后座区控制器]
RAD [Radio]	RAD [收音机]
SMFAH [Seat module, driver's side rear]	SMFAH [驾驶员侧后部座椅模块]
SMBFH [Seat module, passenger's side rear]	SMBFH [前乘客侧后部座椅模块]
DSP [Digital Sound Processor]	DSP [数码音响处理系统]
HKL [Rear-lid lift]	HKL [后行李箱盖提升装置]
STH [Park heating]	STH [驻车加热]
SMFA [Seat module, driver]	SMFA [驾驶员座椅模块]
SMBF [Seat module, passenger]	SMBF [前乘客座椅模块]
LM [Lights Module]	LM [灯光模块]
LSZ/LCM [Light switching center]	LSZ/LCM [灯光开关中心]
AHM [Trailer module]	AHM [挂车模块]

FRM [Footwell Module]	FRM [脚部空间模块]
KBM [Body Basic Module]	KBM [车身基础模块]
SMF [Seat memory, driver]	SMF [司机座椅存储器]
CID [Central Information Display]	CID [中央信息显示器]
FD/CIDF [Rear-compartment display]	FD/CIDF [后部车厢显示器]
CIDF2 [Rear-compartment display]	CIDF2 [后部车厢显示器]
RFK [Reversing camera]	RFK [倒车摄像头]
IHKA/IHKR [Integrated automatic heating/air conditioning]	IHKA/IHKR [集成自动加热/空调系统]
FKA [Rear heater/air conditioning]	FKA [后部加热器/空调]
SHZH [Independent/auxiliary heater]	SHZH [停车预热/辅助加热装置]
NVK [Night Vision camera]	NVK [夜视摄像机]
CCC-A [Applications]	CCC-A [设备]
GR [Cruise control]	GR [巡航控制]
FGB [Rear Compartment blower]	FGB [后部车厢鼓风机]
SES [Language-input system]	SES [语言输入系统]
NAJ [Navigation Computer, Japan]	NAJ [导航仪计算机, 日本]
MID [Multi Information Display]	MID [多功能显示器]
BIT [Basis Interface Telephone]	BIT [基本接口电话]
AIC [Automatic Interval Control]	AIC [刮水器自动间歇控制]
VID [Video Module]	VID [视频模块]
BM [On-board monitor]	BM [随车监视]
PMA [Parking assistant]	PMA [驻车辅助]
VOCS [Interior camera]	VOCS [内部摄像头]
ZGW [Central Gateway Module]	ZGW [中央网关模块]
ADS [Throttle-Valve Control]	ADS [节气门控制]
AHK [Active Rear-Axle Kinematics]	AHK [主动后桥运动学]
EKM [Electronic Body Module]	EKM [电子车身模块]
EML [Elec. throttle]	EML [电子发动机输出控制]
FHK [Rear Heater A/C System]	FHK [后暖风空调系统]
HKA [Rear-cabin automatic A/C]	HKA [后座区暖风和空调系统]
GSA [Closed-Loop-Controlled Differential-Lock AWD]	GSA [闭环控制差速锁全轮驱动]
URS [Rollover sensor]	URS [防翻滚传感器]
VMX [Top-speed Regulation]	VMX [最高车速调整]
VNC [Variable Camshaft Control]	VNC [可变凸轮轴控制]
XEN [XENON LIGHTS]	XEN [氙气大灯]
SPM/SM	SPM/SM
SMB [Entrance aid, passenger]	SMB [进车辅助, 乘客侧]
SPMBT [Mirror memory, passenger]	SPMBT [乘客后视镜存储]
SPMFT [Mirror memory, driver]	SPMFT [司机后视镜存储]
ASD [Active Sound Design]	ASD [Active Sound Design]
TBX [Touchbox]	TBX [触控盒]
STML [Headlight driver module, left]	STML [左侧大灯驱动器模块]
STMRT [Headlight driver module, right]	STMRT [右侧大灯驱动器模块]

LHML [LED main light module, left]	LHML [左侧LED大灯控制模块]
LHMR [LED main light module, right]	LHMR [右侧LED大灯控制模块]
GZAL [Targeted illumination, left]	GZAL [左定向照明]
GZAR [Targeted illumination, right]	GZAR [右定向照明]
LRA [Headlight beam throw adjustment]	LRA [大灯光束投射调节]

统]

IC-GW [网关]

[控制显示器/用户接口]

Functions Notes (功能说明)			
	Basic functions:	基本功能	
V	VERSION INFORMATION	版本信息	
C	DTC	读故障码，清故障码，故障码帮助	
D	DATA Stream	读数据流	
T	ACTIVATION TEST	动作测试	
F	FREEZE FRAME	冻结帧	
	Special functions:	特殊功能	
S3	Maintenance / CBS RESET	CBS 复位	
S3-1	Engine Oil	发动机机油	
S3-2	Microfilter	火花塞	
S3-3	Front barke	前制动	
S3-4	Rear brake	后制动	
S3-5	Vehicle check	车辆检查	
S3-6	Spark plugs	微过滤器	
S3-7	Brake fluid	制动液	
S3-8	Coolant	冷却液	
S3-9	Vehicle inspection	车辆检查日期	
S3-10	Exhaust emission inspection	废气检查日期	
S3-11	Diesel particle filter	柴油机微粒过滤复位	
S4	Maintenance / CBS Correct	CBS 校正	
S4-1	Engine Oil	发动机机油	
S4-2	Microfilter	火花塞	
S4-3	Front barke	前制动	
S4-4	Rear brake	后制动	
S4-5	Vehicle check	车辆检查	
S4-6	Spark plugs	微过滤器	
S4-7	Brake fluid	制动液	
S4-8	Coolant	冷却液	
S4-9	Vehicle inspection	车辆检查日期	
S4-10	Exhaust emission inspection	废气检查日期	
S4-11	Diesel particle filter	柴油机微粒过滤校正	
S5	Transport mode	运输模式	
S5-1	Delete transport mode	删除运输模式	
S5-2	Set transport mode	设置运输模式	